



STATE OF HAWAII
Department of Agriculture

ACCEPTED
LICENSE NO. 8134.9

12 7/16

Uses standard
1/4" push-to-connect
fittings



Bacteriostatic Water Cartridge

Active Ingredient: Bromine* 15%
Other Ingredients 85%
Total 100%
*from Poly-1 bromo 3-methyl 5 (4'-vinylphenyl) hydantoin
EPA Reg No. 72083-5 EPA Est. No. 072083-WA-1
CA Reg No. 72083 5-AA

**KEEP OUT OF REACH OF CHILDREN
DANGER**

For additional first aid, precautionary, handling and use statements, refer to other panels on this box or label included inside box.

Net Contents: 1 Cartridge (14.5g of HaloPure BR)

13 29/32



Bacteriostatic
Water Cartridge



Bacteriostatic Water Cartridge

- For use with drinking water conditioners, coolers, filters and reverse osmosis systems.
- Inhibits the growth of odor-causing bacteria in water filters, water cartridges, and reservoirs.

Bacteriostatic
Water Cartridge



2 1/2
2 1/2

FIRST AID	
IF IN EYES	Hold eye open and rinse slowly and gently with water for 15-20 minutes. Remove contact lenses, if present, after the first 5 minutes, then continue rinsing.
IF SWALLOWED	Call a poison control center or doctor immediately for treatment advice. Have person sip a glass of water if able to swallow. Do not induce vomiting unless told to by a poison control center or doctor. Do not give anything to an unconscious person.
IF ON SKIN OR CLOTHING	Take off contaminated clothing. Rinse skin immediately with plenty of water for 15-20 minutes. Call a poison control center or doctor for treatment advice.
IF INHALED	Move person to fresh air. If person is not breathing, call 911 or an ambulance, then give artificial respiration, preferably mouth-to-mouth if possible. Call a poison control center or doctor for further treatment advice.

HOTLINE NUMBER

Have the product container or label with you when calling a poison control center or doctor for treatment. Call CHEMTREC at 1-800-424-9300 (Domestic, North America) or 703-527-3887 (International, collect calls accepted) for emergency medical treatment information. For additional emergency information, call the National Pesticides Information Center at 1-800-872-7278, 8:30 AM to 4:30 PM Pacific Time (PT), seven days a week. During other times, call the poison control center 1-800-222-1222.



1732 2076 SL SE 317 103 Benthall WA 98021
Phone 425-881-6664 Fax 425-556-4120 www.halopure.com
HaloPure, Inc.
HaloPure, Inc. • Copyright 2012 HaloPure, Inc. • Rev. 05/01/10
HaloPure and HaloPure are trademarks or registered trademarks of HaloPure, Inc.




NSF
This HaloPure BR media is NSF International approved and certified by NSF/AANSI Standard 42 for municipal water treatment applications.
The HaloPure Bacteriostatic Water Cartridge is only for use in drinking water treatment devices that treat potable water or municipal water in accordance with the Safe Drinking Water Act. This product is not designed to treat salt water, waste water, or raw, untreated water, and is not a drinking water purifier.
Push-to-connect fittings are not included. We recommend you use John Guest Equal Straight Connector P/N PPO408V or comparable polypropylene fitting (not included), to install the HaloPure Bacteriostatic Water Cartridge.

Works with drinking water devices that use standard 1/4" water line including:
• Water dispensers
• Reverse osmosis units

The HaloPure Bacteriostatic Water Cartridge removes objectionable tastes and odors from drinking water by stopping odor-causing bacteria from growing inside the water filter, water cartridge, and reservoir.

Bacteriostatic Water Cartridge

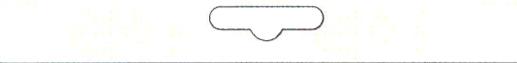

V

6



Bacteriostatic Water Cartridge

The HaloPure Bacteriostatic Water Cartridge is a bacteriostatic water treatment cartridge for use in point-of-use drinking water applications. The cartridge is only for use in drinking water applications that treat potable water or municipal water treated in accordance with the Safe Drinking Water Act.

The HaloPure Bacteriostatic Water Cartridge is designed to treat water that has been pretreated by devices that reduce organic matter content in water, such as reverse osmosis units and filters, prior to treatment by the HaloPure Bacteriostatic Water Cartridge. When used with devices that reduce organic matter, the HaloPure Bacteriostatic Water Cartridge may also be used with water conditioners, coolers and various other treatment devices. Do not use the HaloPure Cartridge with any drinking water treatment devices employing ozone or hydrogen peroxide. This product is not designed to treat salt water, waste water, or raw, untreated water, and is not a drinking water purifier.

KEEP OUT OF REACH OF CHILDREN DANGER

FIRST AID	
IF IN EYES	Hold eye open and rinse slowly and gently with water for 15-20 minutes. Remove contact lenses, if present, after the first 5 minutes, then continue rinsing eye.
IF SWALLOWED	Call a poison control center or doctor immediately for treatment advice. Have person sip a glass of water if able to swallow. Do not induce vomiting unless told to by a poison control center or doctor. Do not give anything to an unconscious person.
IF ON SKIN OR CLOTHING	Take off contaminated clothing. Rinse skin immediately with plenty of water for 15-20 minutes. Call a poison control center or doctor for treatment advice.
IF INHALED	Move person to fresh air. If person is not breathing, call 911 or an ambulance, then give artificial respiration, preferably mouth-to-mouth if possible. Call a poison control center or doctor for further treatment advice.
HOTLINE NUMBERS	
Have the product container or label with you when calling a poison control center or doctor or going for treatment. Call CHEMTREC at 1-800-424-9300 (Domestic, North America) or +1-703-527-3887 (International, collect calls accepted) for emergency medical treatment information. For additional emergency information, call the National Pesticides Information Center at 1-800-858-7378, 6:30 AM to 4:30 PM Pacific Time (PT), seven days a week. During other times, call the poison control center 1-800-222-1222.	

SEE OTHER PANEL FOR PRECAUTIONARY STATEMENTS

Active Ingredient:	
Bromine*	16%
Other Ingredients	84%
Total	100%
*from Poly-1-bromo-5-methyl-5(4'-vinylphenyl) hydantoin	

EPA Reg No. 72083-5

CA Reg. No. 72083-5-AA

EPA Est. No. 72083-CHN-1



Department of Agriculture
STATE OF HAWAII

LICENSED

8134.9

PERIOD 2013-2015 LIC. NO.

Net Contents: 1 Cartridge (14.5 grams of HaloPure BR)

PRECAUTIONARY STATEMENTS HAZARDOUS TO HUMANS AND DOMESTIC ANIMALS

DANGER: Corrosive. Causes irreversible eye damage. Do not get in eyes or on clothing. If you must open the cartridge, follow these precautions. Wear goggles or face shield. Harmful if swallowed or inhaled. Avoid breathing dust or vapors. Avoid contact with skin or clothing. Wear long sleeved shirt, pants, socks and shoes. Wear chemically resistant gloves such as latex gloves when handling product or opened container. Wash thoroughly with soap and water after handling and before eating, drinking, chewing gum, using tobacco or using the toilet. Remove and wash contaminated clothing before reuse.

ENVIRONMENTAL HAZARDS

Bromine is toxic to fish and wildlife. Do not discharge effluent containing this active ingredient into lakes, streams, ponds, estuaries, oceans or other public water unless in accordance with the requirements of a National Pollution Discharge Elimination System permit and the permitting authority has been notified in writing prior to discharge. Do not discharge effluent containing this product into sewer systems without previously notifying the sewage treatment plant authority. For further guidance, contact your State Water Board or Regional Office of the EPA.

DIRECTIONS FOR USE

It is a violation of Federal law to use this product in a manner inconsistent with its labeling.

To install the cartridge, place the cartridge in-line in the drinking water treatment system. To inhibit bacterial fouling of the filter, place the HaloPure Bacteriostatic Water Cartridge up stream of the filter. To keep water fresh in the water storage reservoir and inhibit non-public health bacterial fouling of the container, place the cartridge up stream of the reservoir. Ensure the flow of water in the system corresponds to the flow direction arrows on the cartridge.

Do not open Mylar cartridge package until immediately before installing. Long-term exposure to room air can harm the cartridge.

1. Thoroughly wash hands with soap and water, open and remove the cartridge from Mylar bag. Discard small desiccant container inside of bag.
2. Use standard 1/4 inch push-to-connect fittings to connect to water line. Push-to-connect fittings are not included. We recommend you use John Guest Equal straight Connector P/N PP0408W, or comparable polypropylene fitting (not included), to install the HaloPure Bacteriostatic Water Cartridge.

When used with reverse osmosis systems replace the cartridge after 1 year or 3000 liters, or in non-reverse osmosis applications replace the cartridge after 6 months or 1500 liters.

STORAGE AND DISPOSAL

Do not contaminate water, food or feed by storage or disposal. Wastes resulting from the use of this product must be disposed of onsite or at an approved waste disposal facility.

PESTICIDE STORAGE: Store the cartridge container in a cool, dry place. Avoid contact with strong oxidizing agents and other chemicals. Avoid excessive heat.

PESTICIDE DISPOSAL: Securely wrap original container in several layers of newspaper and discard in trash.

PESTICIDE CONTAINER DISPOSAL: Nonrefillable container. Do not reuse or refill this container. Discard in trash or offer for recycling if available.

DO NOT incinerate or burn the cartridge.

- Avoid direct exposure to the bead material sealed inside the cartridge. The bead material is a bromine pesticide.
- The cartridge contains a corrosive pesticide, bromine. Do not handle or eat bead material inside of the cartridge.
- Dispose of used cartridge properly. Do not burn cartridge.
- Do not tamper with or open the cartridge.

WARRANTY

Seller warrants that this product conforms to its chemical description and is reasonably fit for the purposes stated on the label when used in accordance with label directions under normal conditions of use, but neither this warranty nor any other warranty of **MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE**, express or implied, extends to the use of this product contrary to label instructions, or under abnormal conditions, or under conditions not reasonably foreseeable to Seller, and Buyer assumes the risk of any such use.

US PATENTS: 5490983, 6548054

Other US and International Patents Pending.

HaloSource, Inc.

1725 220th St. SE, STE 103, Bothell, WA 98021

Phone: 425-881-6464 • Fax: 425-556-4120 • www.halopure.com

HaloSource and HaloPure are trademarks or registered trademarks of HaloSource, Inc.

© 2012 HaloSource, Inc. • Rev. 0416-01



This HaloPure BR media is Tested and Certified by NSF International against NSF/ANSI Standard 42 for material requirements only.

COMPONENT

NSF certified ISO9001:2008 registered production facility.

